

THE BOLT RECOIL SHOCK SYSTEM

B4 SOPMOD

Special Operations Peculiar MODification

Handling Cautions And Instruction Manual





B.R.S.S. is a revolutionary design with International Patents Registere

With Tomy Lee's knowledge, the develop team in Bolt Airsoft has created a powerful recoil system called B.R.S.S - Bolt Recoil Shock System. B.R.S.S is a revolutionary paten. The B.R.S.S is utilized an outstanding designation by kinetic energy roduced by piston which then switches to Recoil weight of stock tube and subsequently displacement occurred to reach the outcome of recoil simulator. Such novel devise has been gone through several tests and accordingly BRSS comes into existence!





[Handling cautions and instruction manual]

Always read through this manual before operation



This sport gun is developed for enjoying sport shooting through correct sport shooting operation. You can experience unique feel of the airsoft gun, which is a most suitable sport goods to improve your shooting sense, if you recognize its features and operational warnings. As the airsoft gun has the capacity to shoot BB bullets by 50 to 60 meters, careless shooting and wrong operation are dangerous, causing eye damage or other injury. Make sure to read through warnings stipulated below and observe rules and manners for pleasant sport shooting.

▶ Operation of this airsoft gun for competition use is restricted to users of 18 years old or more. Careless shooting and wrong operation are dangerous, causing eye damage other injury.





Always wear eye protective gear.



Never shoot the air gun at places where people and cars pass cross.



Never shoot the airsoft gun towards a person or animal.



Always put the gun in a case or bag when you are carrying it.



You may be punished if you are shooting for a practical joke.



Store the air gun at places out of reach by children.



Always attach the protective plug to the gun muzzle.



BB bullets may be shooting out even if the magazine is removed.



Never look into the gun muzzle.



Always set the selector lever to the Safety position.



Avoid pulling the trigger carelessly.



Release put away your fingers from the trigger, except when you are ready to shoot a target.



Always direct the muzzle towards a safe direction.



Never disassemble or modify the air gun.

The operation procedure varies according to the model. Make sure to operate an air soft gun after recognizing its features. We are not responsible for any accidents, events, injuries or repair costs arising from wrong operation and handling or by modification and disassembly of the airsoft gun.







GOAL

Our product is designed innovatively as the brand-new electronic gun BOLT which purses the goal of the perfection in Recoil Simulator. In order to enable the players in the survival game and military collector can own such GBB recoil simulator and AEG sustained firing (shooting) joys simultaneously; therefore, Bolt Recoil Shock System (BRSS) is herewith created.



BRSS

BRSS is a revolutionary paten. The BRSS is utilized an outstanding designation by kinetic energy produced by piston which then switches to Recoil weight of stock tube and subsequently displacement occurred to reach the outcome of recoil simulator. Such novel devise has been gone through several tests and accordingly BRSS comes into existence!



AEG with BRSS has the following advantages

- High BB ball capacity of AEG and powerful recoil of GBB available.
- High Durableness. (Integrates many new designs and the components intensity promotion)
- High compatibility and easy to re-equip in the outward appearance.
- Repair easy since the spares is compatible with old system.

Component Name



- 1 Flash Hider
- 2 Front Sight (Up Down)

2

- 3 Ejector Button (Dummy)
- 4 Bolt Catch (Dummy)
- **5** Trigger
- 6 Selector (Switch)

- 7 Delta Ring
- 8 Rear Sight
- 9 Charging Handle
- 10 Grip
- 11 Crane Stock
- **12** Magazine Catch

- 13 Stock Lever
- 14 Magazine
- 15 Bolt Plate
- 16 Grip Dust Cover
- 17 Sling Mount
- **18** Bolt Cover



Setting the battery







Insert the battery inside the stock as shown and connect connectors.



- **3** Store the connector in the space insdie the stock.
- 4 Install the stock button cover and the stock button.



The B4 SOPMOD velocity: 120 m/s (395fps)




Battery Specification: Li-Po 7.4V 22C or Ni-Cd 9.6V



Please use the batteries according to the factory specification in order to avoid malfunction.

Movable Parts 可動部の説明



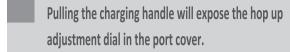







The stock will stop at the first position if it is pulled without pushing in the "Release Lever".

Instruction of Rear Battery Plug Wire

Extra Rear Battery Plug Wire is required when the original was damaged by foreign accident or wire loose.





Rear Battery Plug Wire is enclosed inside the accessory box.

Sling Mount in BOLT B4 SOPMOD





5 Variable HOP-UP System



By producing a back-spin on the BB bullets. This system allows for straighter and longer distance shooting than normal air gun. Unlike the fixed type, the BOLT AIRSOFT variable hop up system permits one touch adjustments using the dial and lever, making it an ideal hop up system.

properly.

Rear Wire Assemble & Disassemble Guide

ATTENTION

Assembling or dissembling the rear wire correctly will reduce the chances of damaging your wires. If wires do become damaged please contact your local retail shop or contact BOLT AIRSOFT to purchase a new wire setavoid malfunction.

Stock Tube Lock Ring

6

The red line drawn on the image to the left shows the difference between the B4 SOPMOD and the B4A1 Stock tube lock ring.

B4 SOPMOD

0

It will be in your best interest to use the proper tools when assembling/disassembling the rear wire set to ensure that your SOPMOD functions

B4 A1



The area where the wires will pass threw have been circled red to help show you where the wires will go.



The path area (red circled) for wire pass through to the stock tube where the stock tube lock is at the right position.

Rear Wire Path Diagram





The wire set goes through the circled area indicated on the lower receiver below.



The dented area on the stock tube lock should match the circled area on the end plate.






Install wire cover on to buffer tube while making sure that the wires stay in place.










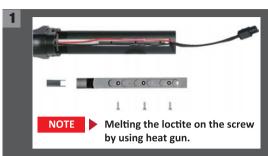





Before removing the stock tube lock, make sure that your ar-15 wrench is aligned properly before unscrewing the stock tube lock.

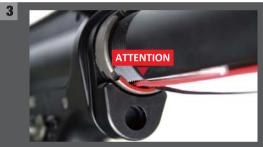

The red line indicates an area where the wire can be damage, please use caution in this area.




The wire should be held down tightly within the wire path when taking the wire.






maintenance or replacement of parts.

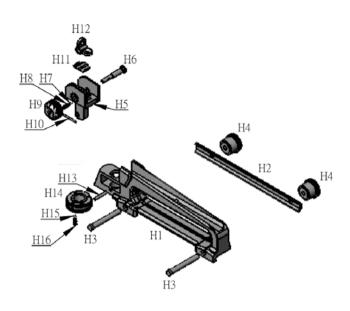

H1	Carry Handle
H2	Carry Handle Locking Plate
Н3	Carry Handle Bolts X2
H4	Carry Handle Knob X2
H5	Rear Sight Housing
H6	Rear Sight Windage Screw
H7	Windage Knob Spring
H8	Windage Knob Plunger
Н9	Windage Knob
H10	Windage Knob Set Screw
H11	Leaf Spring
H12	Peep Sight
H13	Elevation Knob Pin
H14	Elevation Knob
H15	Elevation Knob Bead
H16	Elevation Knob Spring

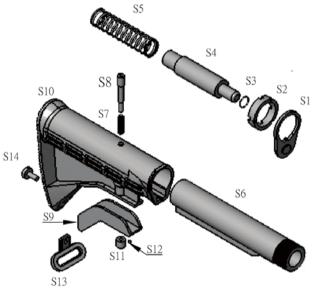

S1	Receiver End Plate
S2	Stock Tube Lock Ring
S6	Stock Tube
S7	Stock Bolt Spring
S8	Stock Bolt
S9	Stock Lever
S10	Retracting Stock
S11	Lever Retainer
S12	Lever Retainer Set Screw
S13	Stock Swivel
S14	Stock Swivel Screw



B4A1 Parts


B40

Magazine Catch Button

B1	Gear Box
B2	Bolt Carrier Guide Rod
B3	Bolt Carrier Spring
B4	Bolt Carrier
B5	Bolt Lock
B6	Bolt Lock Spring
B7	Bolt Plate
B8	Charging Handle
B9	Charging Handle Latch Spring
B10	Charging Handle Catch
B11	Charging Handle Latch Pin
B13	Upper Reciever
B14	Ejection Port Cover
B15	Ejection Port Cover Lock
B16	Ejection Port Cover Lock Spring
B17	Ejection Port Cover Lock Plunger
B18	Ejection Port Cover Pin
B19	Ejection Port Cover Spring
B20	Pin Retaining Ring
B21	Ejector Button Spring
B22	Ejector Button
B23	Ejector Button Pin
B24	Lower Reciever
B25	Take Down Pin
B26	Trigger Pin
B27	Trigger Guard Lock Pin
B28	Trigger Guard Plunger
B29	Trigger Guard Plunger Spring



B30	Trigger Guard	B41	Magazine Catch Spring
B31	Magazine	B42	Magazine Catch
B32	Grip	B43	Bolt Catch
B33	Grip Fix Plat	B44	Bolt Catch Pin
B34	Grip Screws X2	B45	Selector Screw
B36	Grip Dust Cover	B46	Selector Washer
B37	Motor Cover Screw	B47	Selector Spring
B38	Set Screw "Motor Tension Adjustment"	a B48 en	Selector Bead
B39	Magazine Catch Alex Screw	B49	Selector

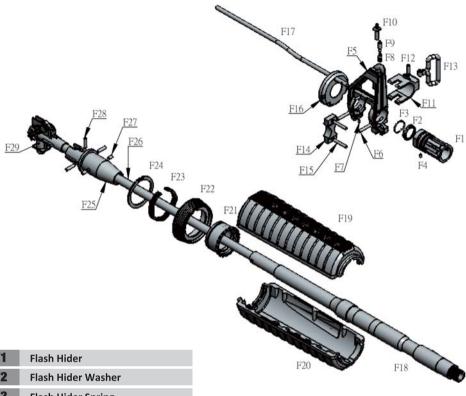

F1	Flash Hider
F2	Flash Hider Washer
F3	Flash Hider Spring
F4	Set Screw X2
F5	Front Sight Housing
F6	Fonnt Sight Housing Pins X2
F7	Front Sight Screw
F8	Front Sight Spring
F9	Front Sight Plunger
F10	Front Sight
F11	Swivel Base
F12	Front Swivel Pin
F13	Swivel
F14	Swivel Base Lock
F15	Swivel Base Lock Pins X2
F16	Handguard End Cap "Front"


F17	Gas Tube
F18	Outer Barrel
F19	Top Handguard
F20	Lower Handguard
F21	Barrel Nut
F22	Delta Ring
F23	Weld Spring
F24	Barrel Snap Ring
F25	Outer Barrel Base
F26	Internal Barrel
F27	Outer Barrel Base Screws
F28	Outer Barrel Base X3
F29	Hop-up Set

B4 SDP MDD


Special Operations Peculiar MODification


10

SOPMOD Parts

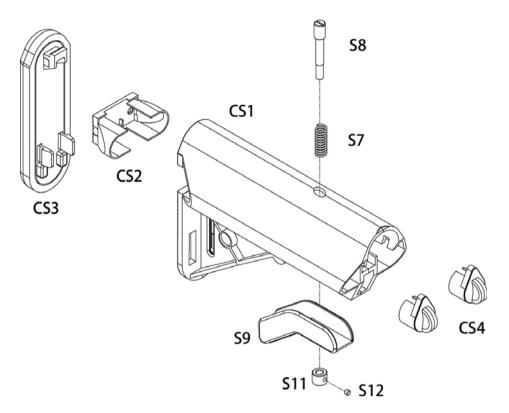


CS1	Crane Stock Housing
CS2	Crane Stock Butt Cover
CS3	Crane Stock Butt Plate
CS4	Crane Stock Front Cover
S7	Stock Bolt Spring
S8	Stock Bolt
S9	Stock Lever
S11	Lever Retainer
S12	Lever Retainer Set Screw

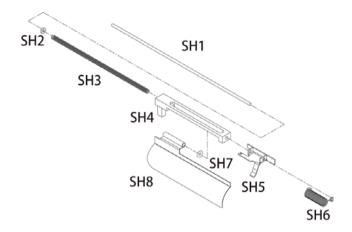

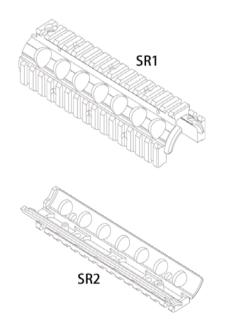


SH1	Bolt Carrier Guide Rod
SH2	Bolt Carrier Guide Rod Washer
SH3	Bolt Carrier Spring
SH4	Bolt Carrier
SH5	Bolt Lock
SH6	Bolt Lock Spring
SH7	Bolt O Ring
SH8	Bolt Plate
SR1	Top Tactical Rail
SR2	Lower Tactical Rail



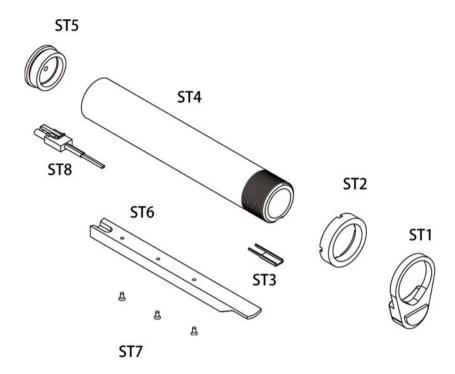

ST1	Receiver End Plate
ST2	Stock Tube Lock Ring
ST3	Stock Tube Wire Cover
ST4	Stock Tube body
ST5	Stock Tube butt Plate
ST6	Stock Tube body Wire Cover
ST7	Stock Tube body Wire Cover Set Screw
СТО	Rear Wire Set

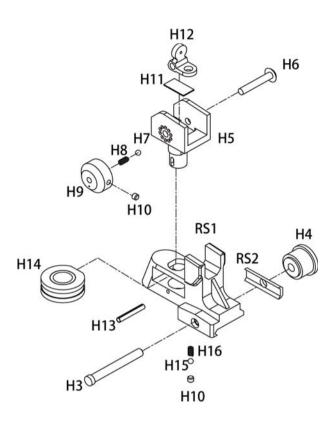

SH1	Hop-up Set
RS1	SOPMOD Rear Sight Housing
RS2	SOPMOD Sight Locking Plate
H4	Sight Knob
H5	Rear Sight Housing
H6	Rear Sight Windage Screw
H7	Windage Knob Spring
H8	Windage Knob Plunger
Н9	Windage Knob
H10	Windage Knob Set Screw
H11	Leaf Spring
H12	Peep Sight
H13	Elevation Knob Pin
H14	Elevation Knob
H15	Elevation Knob Bead
H16	Elevation Knob Spring



